



Appreciating Quality Automation

We at "DOLPHIN AUTOMATION" thank you for the purchase of this product and we assure you for our best services.....always!

# Temperature Controller

OPERATING INSTRUCTIONS TC-K41 / M41 / N41


- 1. Display : 4 digit for PV & 4 digit for SV
- 2. Range : RTD Type -99.9 to 399.9 deg  
J Type -0- 600 deg  
K Type 0 -1300 deg
- 3. Resolution : 1 deg( J/K) and 0.1 deg (RTD)
- 4. Accuracy : +/- 0.5% (Full Scale)
- 5- Hysteresis : 0 to 99°C
- 6. OFFSET : -99 to 99°C
- 7- Alarm Action : Heat / Cool Selectable
- 8. Control Action : ON-OFF / TP action

## Set Points

Set Point (output) can be viewed by pressing **SET** KEY.

Set Point can be changed by pressing **SET** KEY + **▼** & **▲** KEYS

## Programming the TEMP. Controller

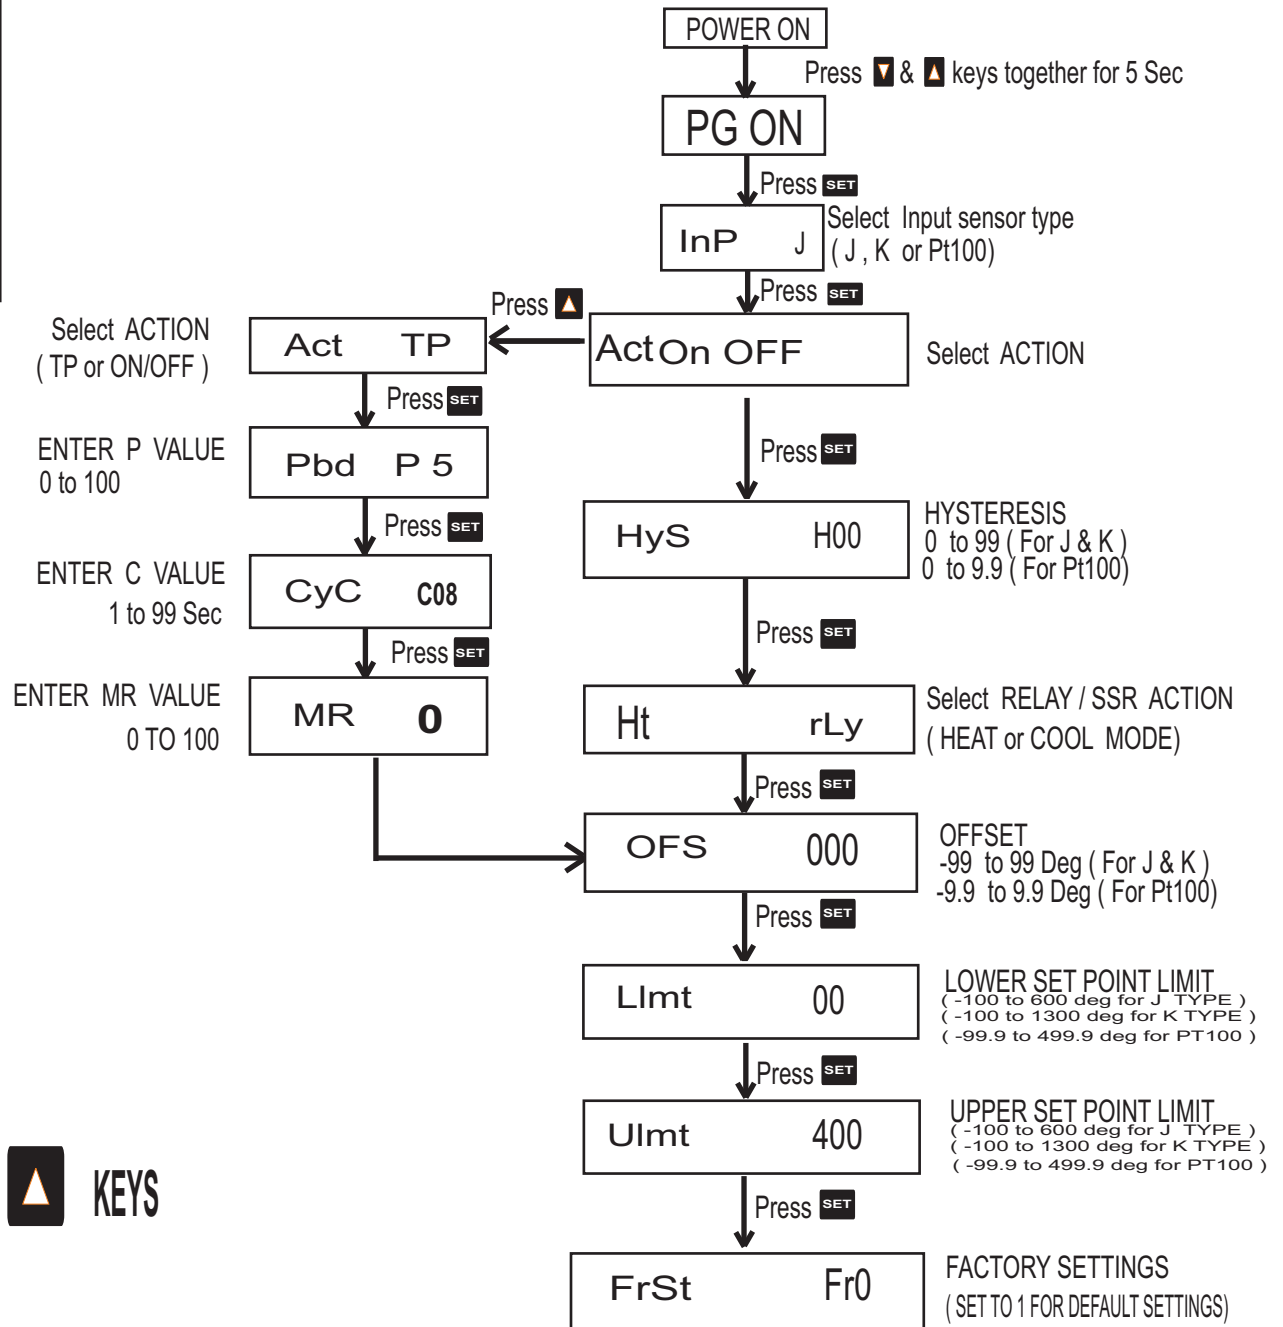

Note: To come out of Programming leave the Keys unpressed for more than 4 seconds