



Appreciating Quality Automation

We at "DOLPHIN AUTOMATION" thank you for the purchase of this product and we assure you for our best services.....always!

Humidity+ Temperature Controller

OPERATING INSTRUCTIONS TH-K82 / M82

SPECIFICATIONS

1. Display : 4 digit for TEMP & 4 digit for HUM
2. Range : RTD Type -99.9 to 199.9 deg
: HUMIDITY - 10- 99.9 RH
3. Resolution : 0.1
4. Accuracy : +/- 0.5% (Full Scale)
- 5- Hysterisis : 0 to 99°C
6. OFFSET : -99 to 99°C
- 7- Relay Action : Heat / Cool - Humidity/ Dehumidity
8. Control Action : ON/ OFF or PROP ACTION

Terminal Connection

1-Connect terminals of the controller according to the terminal connections

Set Point for Temperature

Set Point can be viewed by pressing **T** KEY.


Set Point can be changed by pressing **T** KEY + **▼** & **▲** KEYS

Set Point for Humidity

Set Point can be viewed by pressing **H** KEY.

Set Point can be changed by pressing **H** KEY + **▼** & **▲** KEYS

Programming the Controller

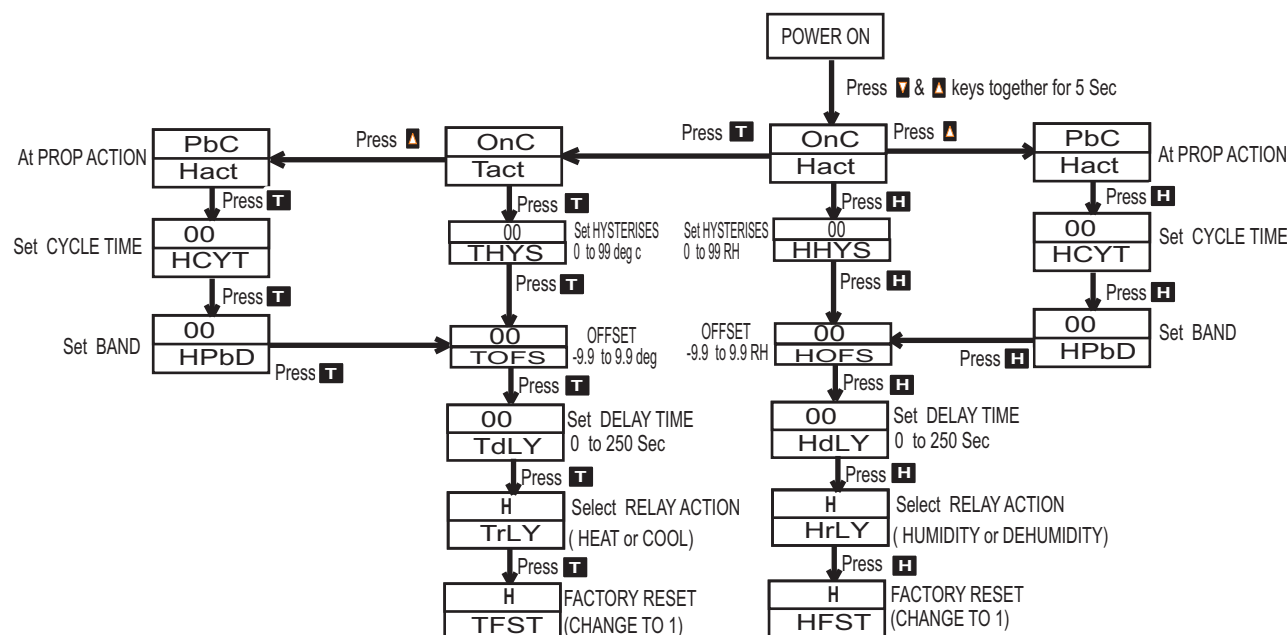

Note: To come out of Programming leave the Keys unpressed for more than 4 seconds

HUMIDITY + TEMPERATURE CONTROLLER

SPECIFICATIONS

1. Display	4 digit for TEMP & 4 digit for HUM
2. Range	RTD Type -99.9 to 199.9 deg HUMIDITY - 10- 99.9 RH
3. Resolution	0.1
4. Accuracy	+/- 0.5% (Full Scale)
5- Hysterisis	0 to 99°C
6. OFFSET	-99 to 99°C
7- Relay Action	Heat / Cool - Humidity/ Dehumidity
8. Control Action	ON/ OFF or PROP ACTION

Terminal Connection

1-Connect terminals of the controller according to the terminal connections

Set Point for Temperature

Set Point can be viewed by pressing **T** KEY.


Set Point can be changed by pressing **T** KEY + **▼** & **▲** KEYS

Set Point for Humidity

Set Point can be viewed by pressing **H** KEY.

Set Point can be changed by pressing **H** KEY + **▼** & **▲** KEYS

Programming the Controller

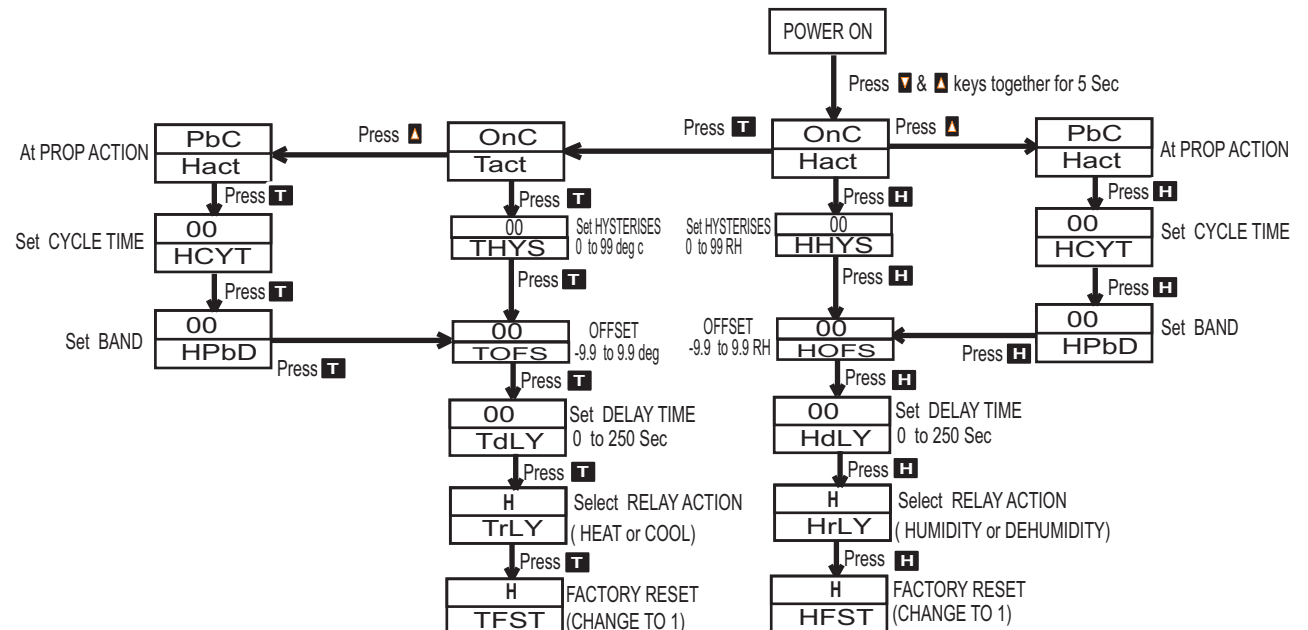

Note: To come out of Programming leave the Keys unpressed for more than 4 seconds